

LTS-100DS

SMS instructions	Reply	Interpretation of instructions
admin123456 136*****	admin ok	Owner number binding, only one owner number can be bound, the last owner number binding is valid
password123456 666888	password ok	Modify the owner password instruction, the password is a 6-digit pure number (the default owner password is: 123456, for example, the new password is 666888)
101#136*****#	OK	The first specific number, this instruction is the same as the "owner number"
102#136*****#	OK	102 is the first SOS specific number
103#136*****#	OK	103 is the second SOS specific number
D101#	OK	D101 # means delete the first number
D102#	OK	D102 # means delete the second number
D103#	OK	D103 # means delete the third number
C10#	101# 103#	102# Query a specific number
125#	OK	Enable Vibration SMS Alarm
126#	OK	Turn off vibration SMS alert
122#	OK	Turn on vibrate phone alarm
121#	OK	Turn off vibration phone alarm
vibtime123456,n	vibtime set ok	Set vibration alarm duration SMS command, 1-15 seconds n (0 ~ 15), 0 cancel vibration alarm, default is 3 seconds, that is, vibration lasts for 3 seconds
88		Remote monitoring When the owner number or a specific number sends this instruction to the terminal's SIM card number, the terminal dials back the phone to implement the monitoring function Note: To realize this function, you need to set the owner number and SOS specific number first.
123		SMS message query location information
G1234		Reply to google link
speed123456 080	speed ok	Turn on speeding SMS notification speed123456 080 Set speed limit 80 km / h 000 is off
move123456 300	move ok	Displacement alarm setting instruction 300 means: a displacement alarm will be reported after 300 meters. ()
SF	SF OK	SMS fortification
CF	CF OK	SMS Disarm
CQGPS	GPS reset OK!	GPS restart
CQ	system reset OK!	Device restart
FORMAT	OK	reset
apn123456 cmnet	apn ok	Set APN instruction format
apnuser123456 user	apnuser ok	Set the user name instruction format corresponding to APN
apnpasswd123456 password	apnpasswd ok	Set the password instruction format corresponding to APN

IP 219.143.106.193 8500	set IP OK	SMS command: IP + space + IP address + space + port number Set server IP and port
CXZT		Query device status Reply: device software version, ID, IP, power, working mode: M is single, A is automatic, C is continuous, signal quality
sleep,123456,10	OK	Turn on hibernation 10: Mean 10 minutes 0: Do not hibernate
109#	OK	Switch between Chinese and English
tmod,123456,5#		Intelligent working mode 5 means to wake up and work once every 5 minutes (can be set to 5-720 minutes)
SMOD,123456#		Power saving mode
NMOD,123456#		Normal working mode
VOX,123456,1,60#		Voice-activated recording 0: Voice-activated off 1: Voice-activated on 60: Adjusted decibel value Voice-activated recording decibel value: 60/70/80/90/100
power,123456,1		Remote power on / off command 1 means power on 0 means power off
FREQ,123456,20		Working mode upload interval 20 means 20 seconds