

SMS command	Reply	Instruction Interpretation
admin123456 136*****	admin ok	The owner number is bound, only one owner number can be bound, and the last bound owner number is valid
password123456 666888	password ok	Modify the owner's password command, the password is 6-digit pure numbers (the default owner's password is: 123456, for example, the new password is 666888)
101#136*****#	OK	The first specific number, the instruction is the same as "owner number"
102#136*****#	OK	102 is the first SOS specific number
103#136*****#	OK	103 is the second SOS specific number
D101#	OK	D101# means delete the first number
D102#	OK	D102# means to delete the second number
D103#	OK	D103# means to delete the third number
C10#	101# 102# 103#	Look up a specific number
pwr sms123456,1	pwr sms alarm set ok	Turn on the power outage SMS alarm
pwr sms123456,0	pwr sms alarm set ok	Turn off the power outage SMS alarm
pwr call123456,1	pwr call alarm set ok	Turn on the power outage alarm
pwr call123456,0	pwr call alarm set ok	Turn off the power outage phone alarm
ACCLOCK,123456,1	OK	SMS setting ACC automatic fortification on
ACCLOCK,123456,0	OK	SMS setting ACC automatic fortification off
ACCLT,123456,3	OK	(3 means automatic defense after 3 minutes) SMS set automatic defense time
acc sms123456,1/0		ACC illegally activates SMS alarm
acc call123456,1/0		ACC illegally activates the telephone alarm
125#	OK	Turn on vibrating SMS alarm
126#	OK	Turn off vibrating SMS alerts
122#	OK	Turn on vibrating phone alarm
121#	OK	Turn off vibrating phone alarms
vib time123456,n	vib time set ok	Set the vibration alarm duration SMS command, 1-15 seconds n(0-15), 0 cancels the vibration alarm, the default is 3 seconds, that is, the vibration lasts for 3 seconds to alarm
so sms123456 (default)	so sms ok	SOS alarm SMS open command
no so sms123456	no so sms ok	SOS alarm SMS close command
so call123456 (default)	so call ok	SOS alarm phone open command
no so call123456	no so call ok	SOS alarm phone close command
88		Remote monitoring When the owner number or a specific number sends this command to the terminal SIM card number, the terminal calls back the phone to realize the monitoring function. Note: To realize this function, you need to set the owner number and SOS specific number first.
123		SMS text message query location information
G1234		reply google link
speed123456 000 (default)	speed ok	Turn off speeding SMS notifications
speed123456 080	speed ok	Enable speeding SMS notification speed123456 080 Set the speed limit to 80 km/h
move123456 300	move ok	Displacement alarm setting command 300 means: Displacement alarm will be reported after 300 meters.
SF	SF OK	SMS fortification
CF	CF OK	SMS disarm
DY	CUT OIL OK	SMS fuel cut off Note: To ensure vehicle safety, the terminal can only perform fuel cut off operation when the GPS is in a valid positioning state and the vehicle speed is less than 20KM/H or when the vehicle is stationary
KY	RESUME OIL OK	SMS fuel
CQGPS	GPS reset OK!	GPS restart
CQ	system reset OK!	Device restart
FORMAT	OK	reset
CXZT	OK	Query device information
apn123456 cmnet	apn ok	Set the APN command format
apn user123456 user	apn user ok	Set the format of the username command corresponding to the APN
apn pass wd123456 password	apn pass wd ok	Set the password command format corresponding to the APN
IP 219.143.106.193 8500	set IP OK	SMS command: IP+space+IP address+space+port number Set server IP and port
DW5	OK	Single working mode (in sleep state, the single working time can be set in minutes) After 5 minutes of work, it will enter the default working mode
auto123456	Set OK	automatic working mode (default) when the device does not set any alarm, after 5 minutes without any operation, the device enters the sleep state: GPS off, GPRS off. The device will wake up instantly when there is a phone call, text message
nslp123456	OK	Continuous working mode (turn off sleep)
up move123456 120	Set OK	Upload interval setting (default 120 seconds)
CXZT		Query device status reply: device software version, ID, IP, power, working mode: M is single, A is automatic, C is continuous, and upload interval
FREQ,123456.30	OK	ACC ON Upload interval 30 means 30 seconds, minimum 5 seconds
STATLC,123456.40	OK	ACC OFF Upload interval 40 means 40 seconds
sleep,123456,10	OK	Turn on sleep 10: means 10 minutes 0: means no sleep
zone123456 e08	OK	Modify the time zone E08: Indicates the East Eighth District
109#	OK	Switch between Chinese and English
#99#id#XXXXXXXXXX##	OK	Modify device ID number
#99#id#9180131583##		