

SMS instructions	Repy	Instruction interpretation
admin123456 136*****	admin ok	The owner's number is bound, the owner's number can only be bound to one, and the last time the owner's number is valid.
password123456 666888	password ok	Modify the owner password command, the password is 6-digit number (the default owner password is: 123456, the case is modified to 666888)
101#136*****#	OK	The first specific number, the order is the same as the "owner number"
102#136*****#	OK	102 is the first SOS specific number
103#136*****#	OK	103 is the second SOS specific number
D101#	OK	D101# means to delete the first number
D102#	OK	D102# means delete the second number
D103#	OK	D103# indicates the deletion of the third number
C10#	101# 102# 103#	Query specific number
pwrsms123456,1	pwr sms alarm set ok	Turn on the power off SMS alarm
pwrsms123456,0	pwr sms alarm set ok	Turn off the power off SMS alarm
pwrcall123456,1	pwr call alarm set ok	Turn on the power off phone alarm
pwrcall123456,0	pwr call alarm set ok	Turn off the power off phone alarm
ACCLOCK,123456,1	OK	SMS setting ACC automatic arming
ACCLOCK,123456,0	OK	SMS setting ACC automatic defense off
ACCLT,123456,3	OK	(3 means automatic arming after 3 minutes) SMS setting automatic arming
accsms123456,1/0		ACC illegally started SMS alarm
accall123456,1/0		ACC illegally initiates a telephone alarm
125#	OK	Turn on vibration SMS alarm
126#	OK	Turn off the vibration SMS alarm
122#	OK	Turn on the vibration phone alarm
121#	OK	Turn off the vibration phone alarm
vibtime123456,n	vibtime set ok	Set the vibration alarm duration SMS command, 1-15 seconds n (0~15), 0 cancel the vibration alarm, the default is 3 seconds, that is, the vibration
soossms123456(默认)	soossms ok	SOS alarm SMS open command
no soossms123456	no soossms ok	SOS alarm SMS close command
soscall123456(默认)	soscall ok	SOS alarm phone open command
no soscall123456	no soscall ok	SOS alarm call closure command
88		"Remote monitor car owner number or specific number when sending this command to the terminal SIM card number, the terminal calls back to realize the monitoring function.
123		SMS SMS query location information
G1234		Reply to Google link
speed123456 000 (默认)	speed ok	Turn off speeding SMS notifications
speed123456 080	speed ok	Turn on speeding SMS notification speed123456 080 Set speed limit 80
move123456 300	move ok	The displacement alarm setting command 300 indicates that the displacement alarm is reported after 300 meters.
SF	SF OK	SMS fortification
CF	CF OK	SMS disarming
DY	CUT OIL OK	SMS off fuel Note: In order to ensure vehicle safety, the terminal only performs the fuel cut operation when the GPS is in the effective positioning state and the vehicle speed is less than 20KM/H or when the
KY	RESUNE OIL OK	SMS oil
CQGPS	GPS reset OK!	GPS restart
CQ	system reset OK!	Device restart
FORMAT	OK	reset
CXZT	OK	Query device information
apn123456 cmnet	apn ok	Set the APN command format
apnuser123456 user	apnuser ok	Set the APN corresponding user name command format
apnpasswd123456 password	apnpasswd ok	Set the password command format corresponding to APN
IP 219.143.106.193 8500	set IP OK	SMS command: IP+space+IP address+space+port number Set server IP
DW5	OK	Single working mode (in the sleep state, you can set the single working time, the unit is minute). After 5 minutes, enter the default working mode.
auto123456	Set OK	Automatic working mode (default) If there is no alarm set, the device will not operate after 5 minutes, and the device will enter the sleep state: GPS off, GPRS off. Instantly wake up the device with a phone call and text
nslp123456	OK	Continuous working mode (off hibernation)
upmove123456 120	Set OK	Upload interval setting (default 120 seconds)
CXZT		Query device status reply: device software version, ID, IP, power, working mode: M is single, A is automatic, C is continuous, and upload interval

FREQ,123456.30	OK	ACC ON upload interval 30 means 30 seconds
STATLC,123456.40	OK	ACC OFF upload interval 40 means 40 seconds
sleep,123456,10	OK	Turn on sleep 10: Indicates 10 minutes 0: Indicates no sleep
zone123456 e08	OK	Modify time zone E08: Indicates Dongba District
109#	OK	Chinese and English switching